



CINQUE

Shower wall installation instructions

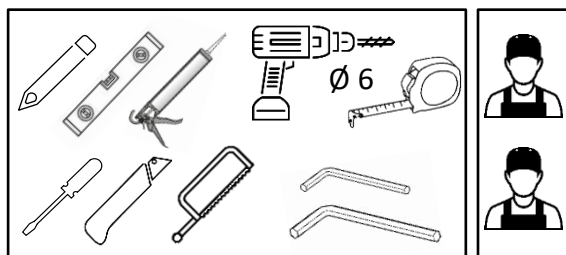









1		DZT100CHR10X 20	1
2		PAL-01	2
3		PAL-01B	1
4		PAL-01B-2	1
5		PAL-01B-3	1
6		PGB-902	2
7		400211PS-011	1
8		3,5X35 SK1SET	10
9		8mm Safety Glass	1
10		8mm Safety Glass	1
11		8mm Safety Glass	1




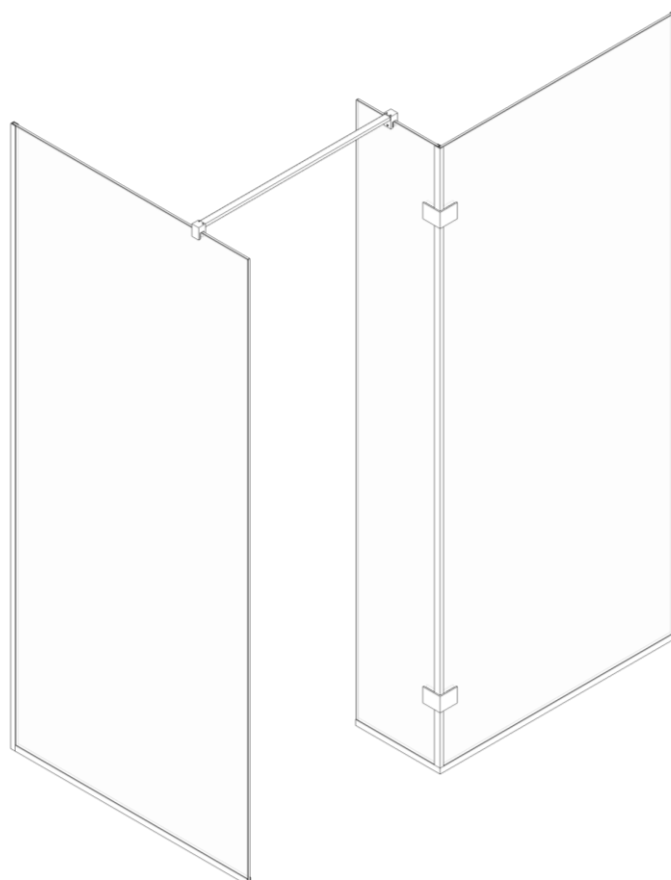





	A	B
1400 X 800 X 2000	1370-1400	768-773
1400 X 900 X 2000	1370-1400	868-873
1500 X 900 X 2000	1470-1500	868-873
1600 X 900 X 2000	1570-1600	868-873
1500 X 1000 X 2000	1470-1500	968-973
1600 X 1000 X 2000	1570-1600	968-973















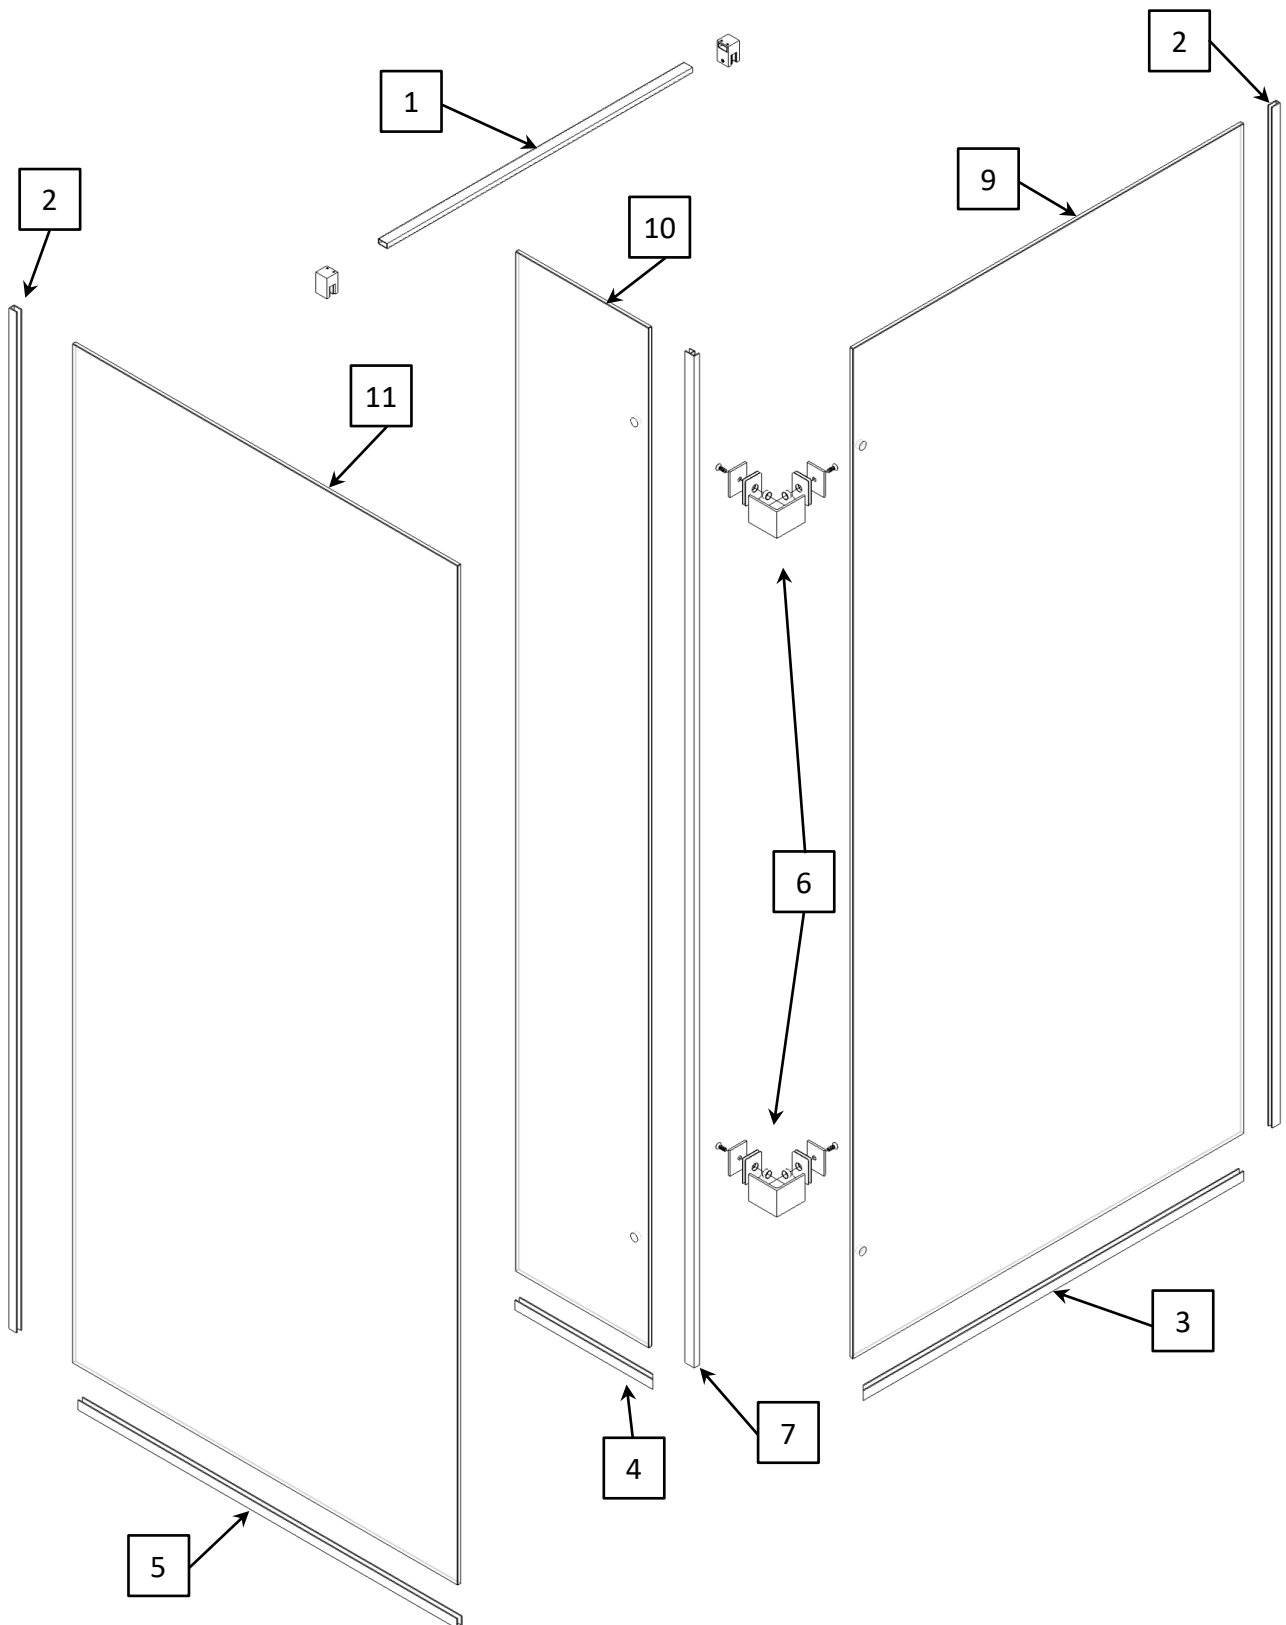


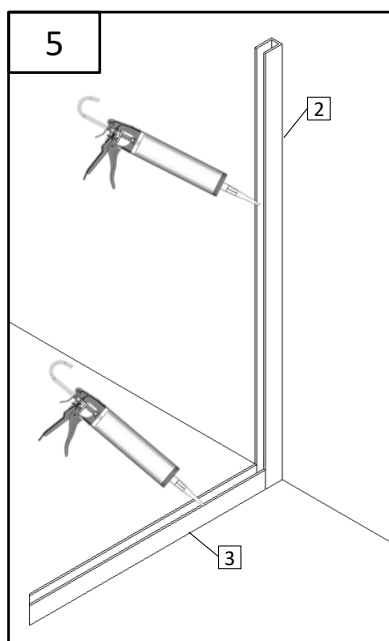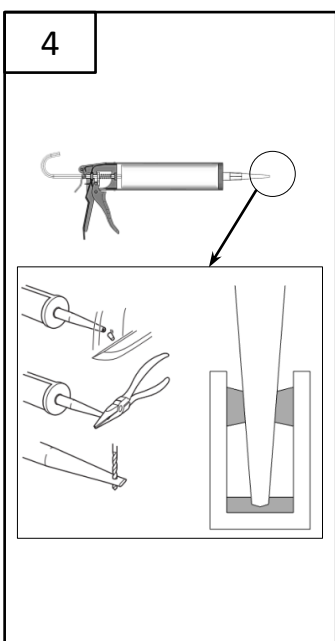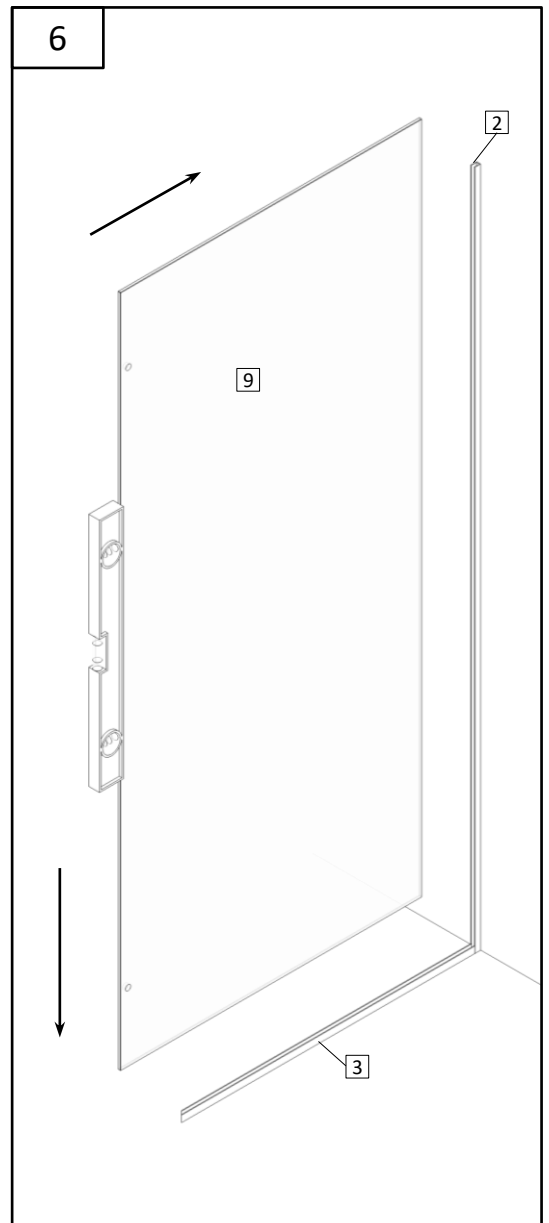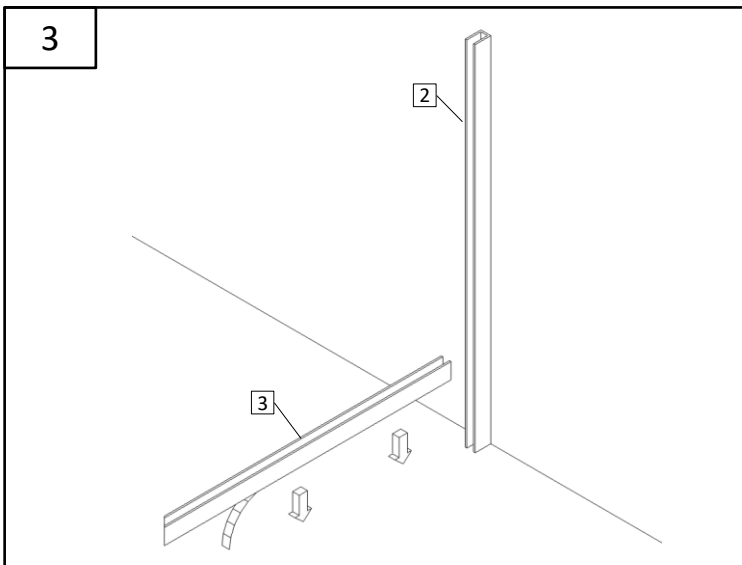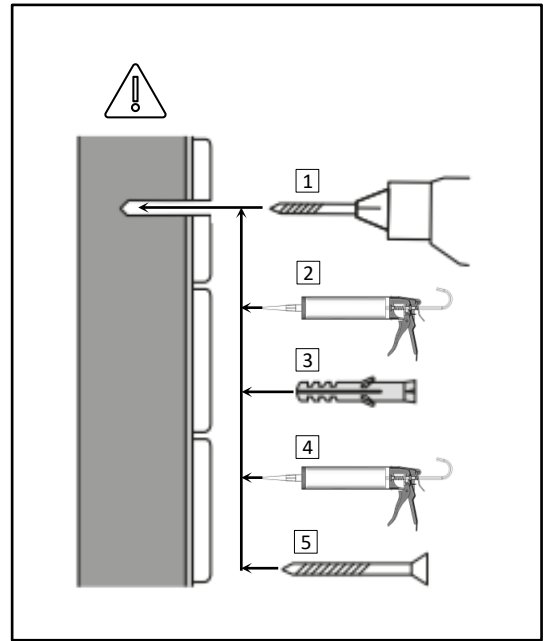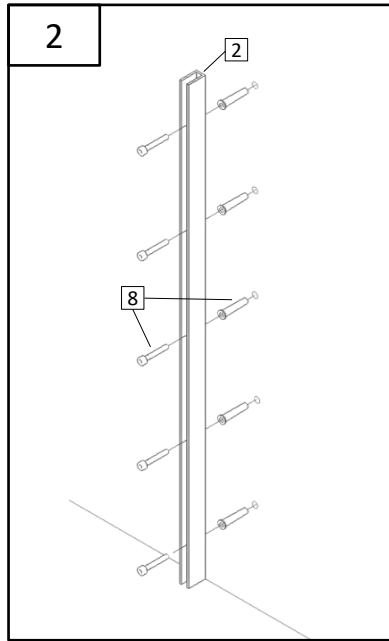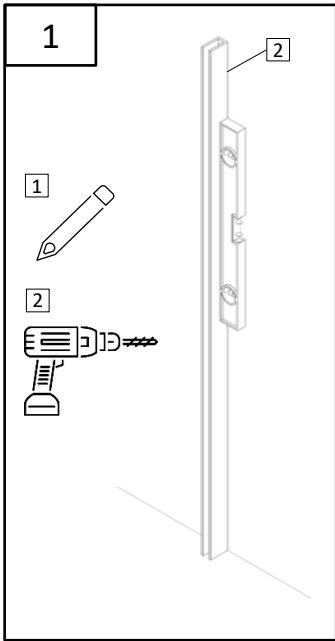

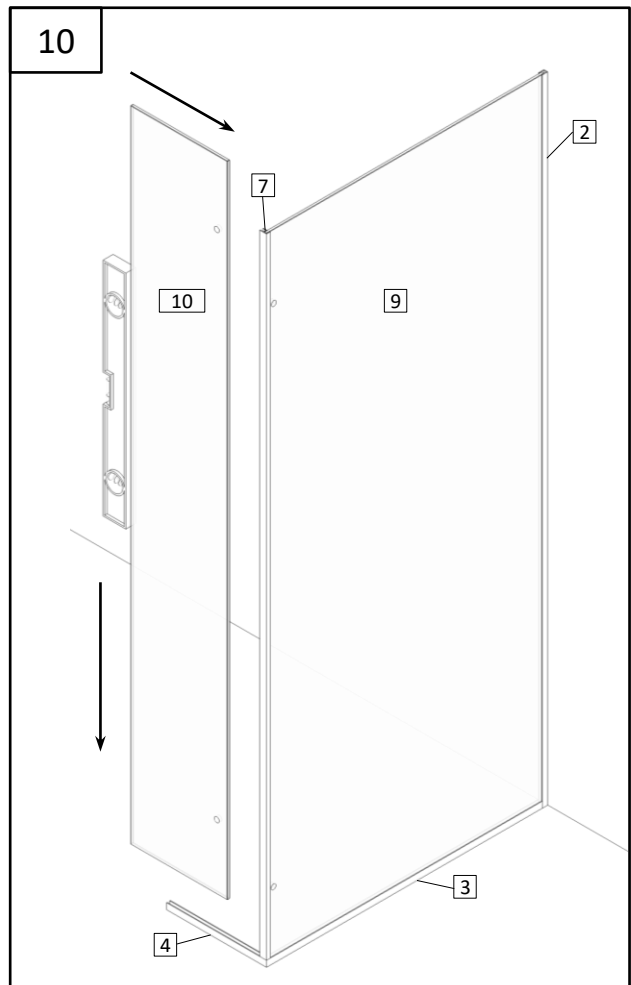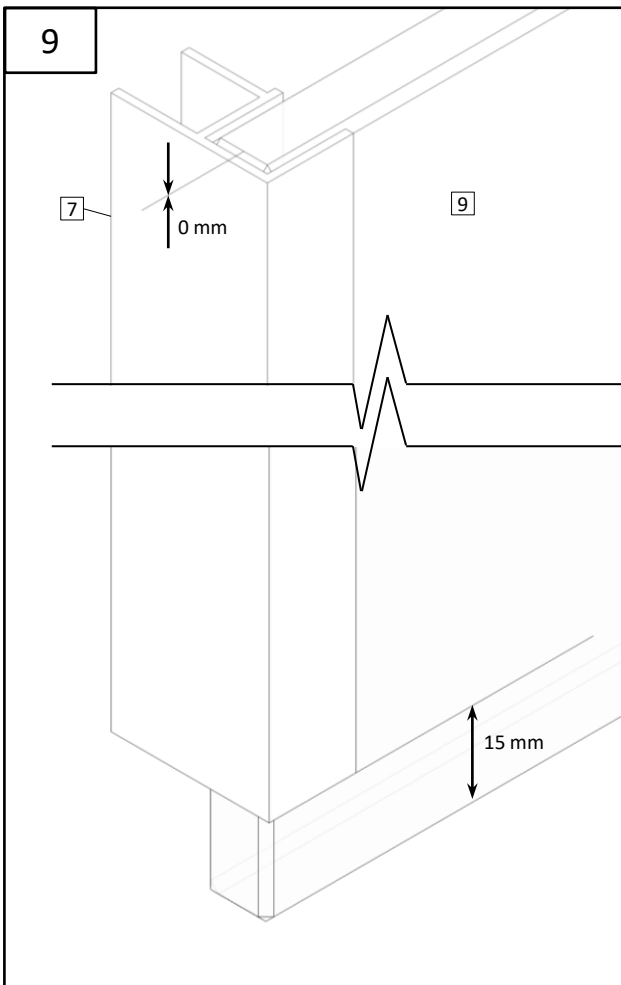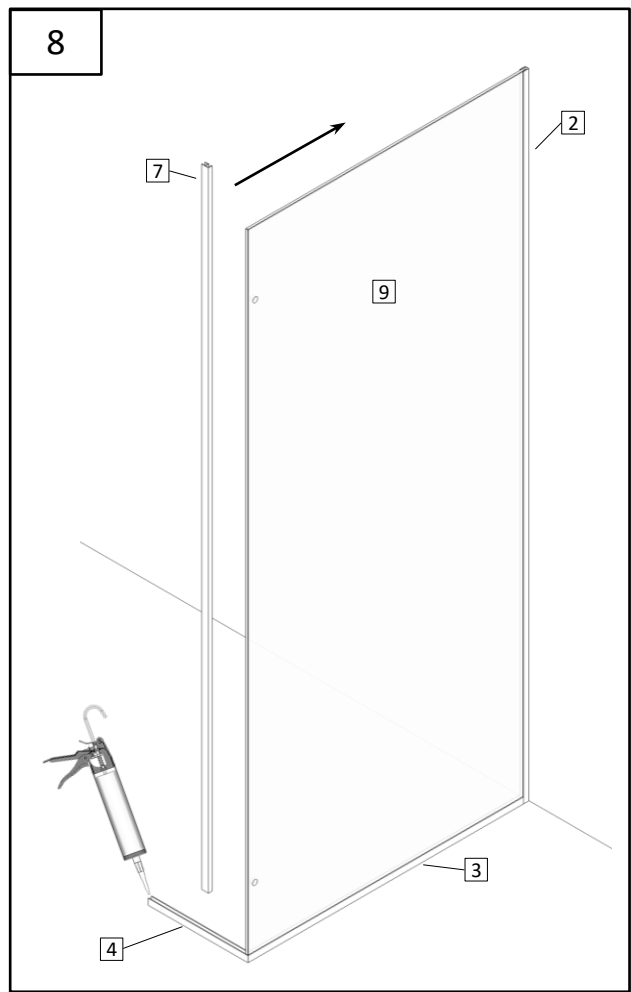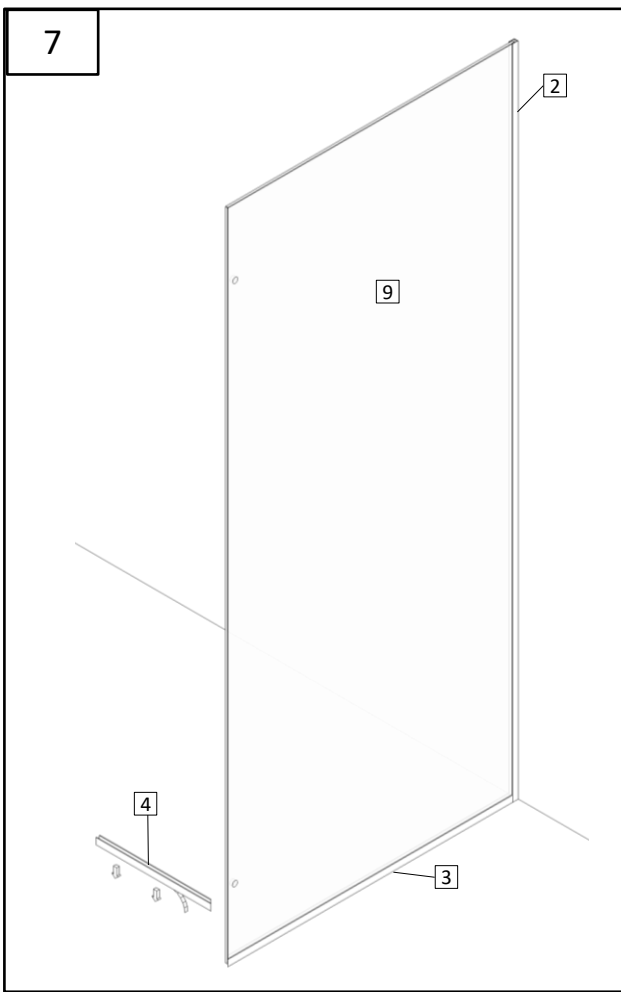

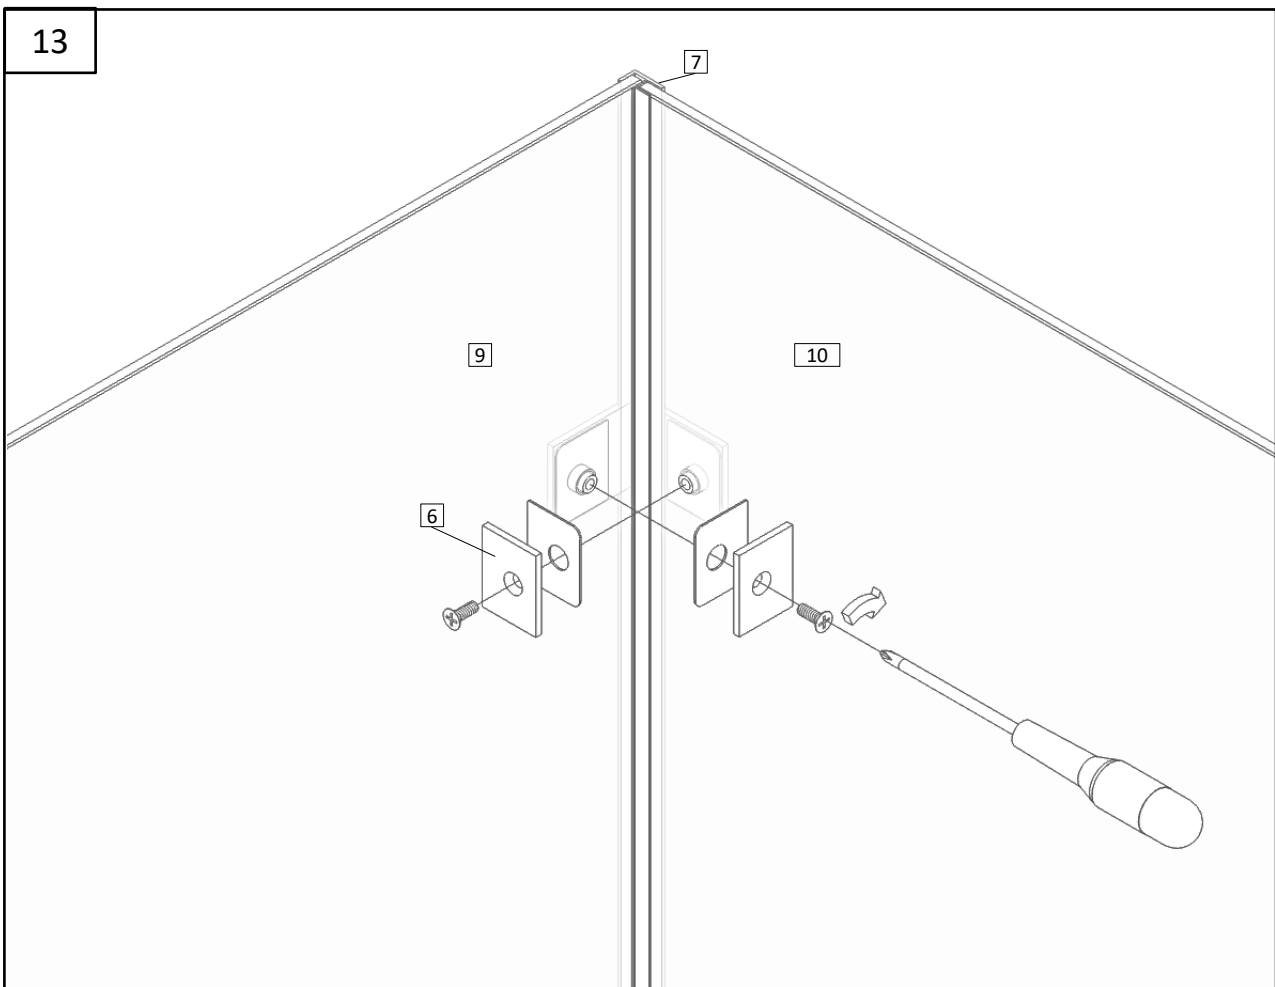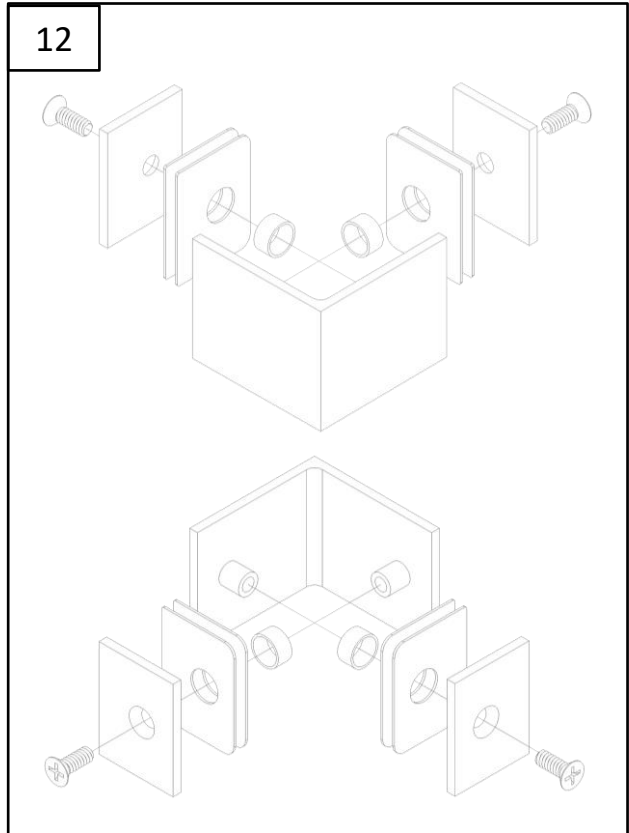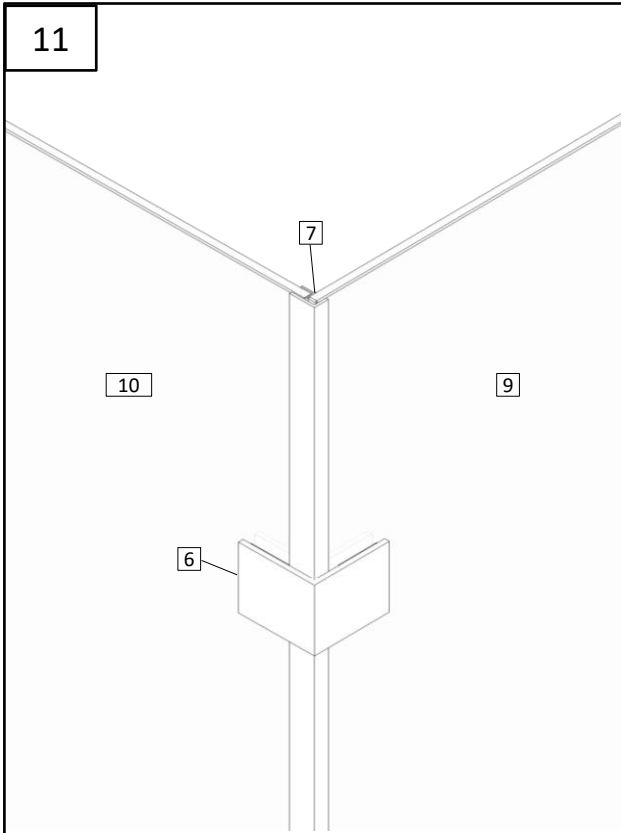

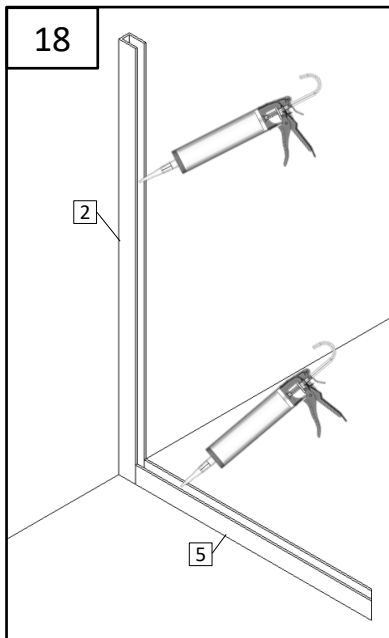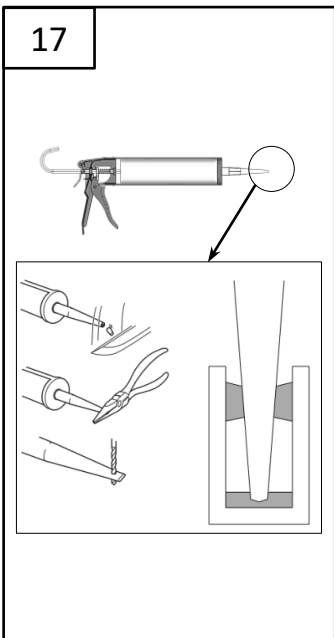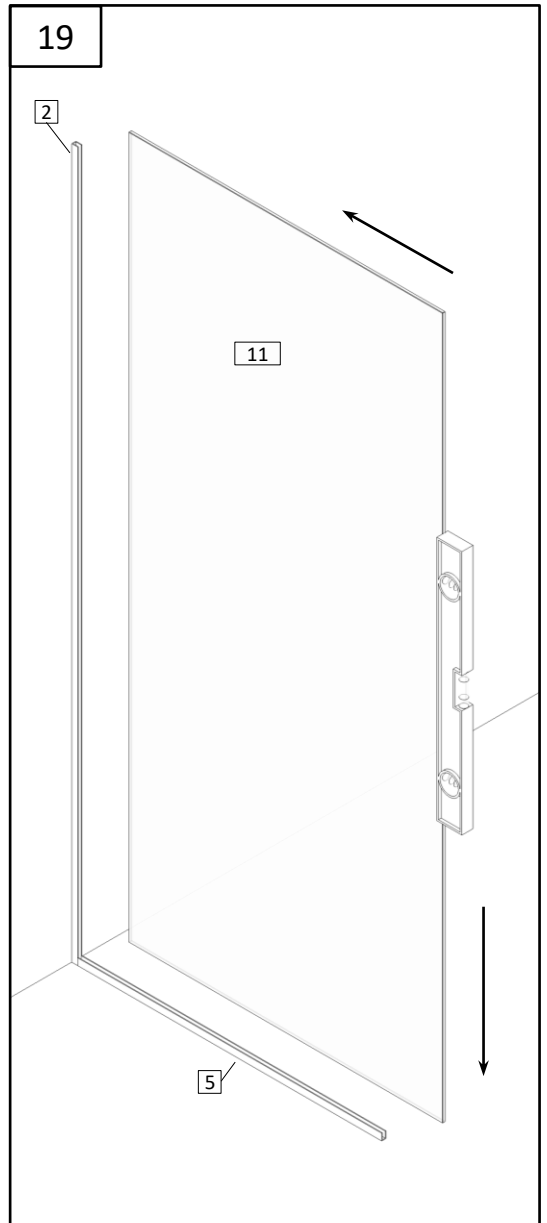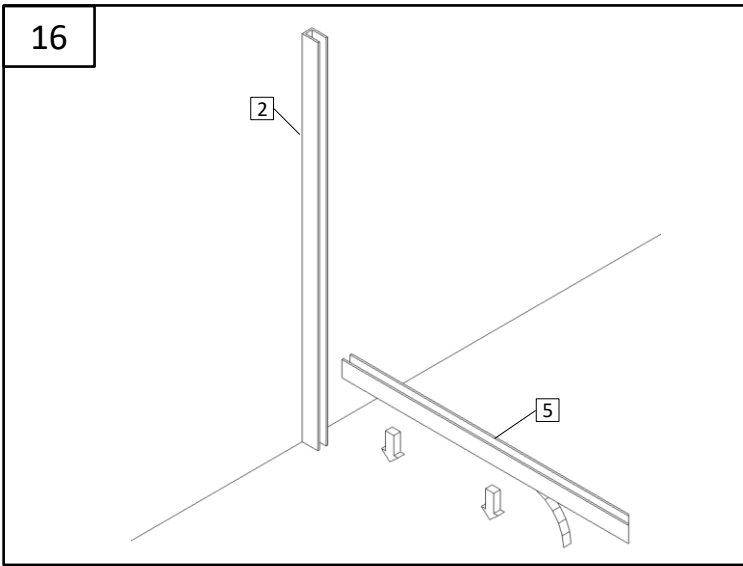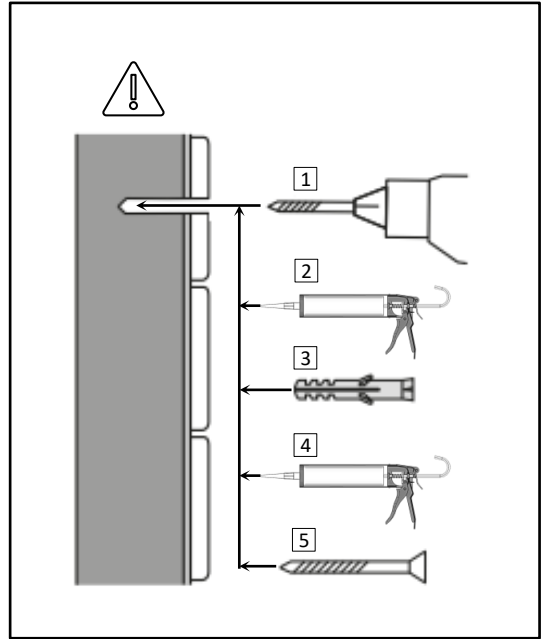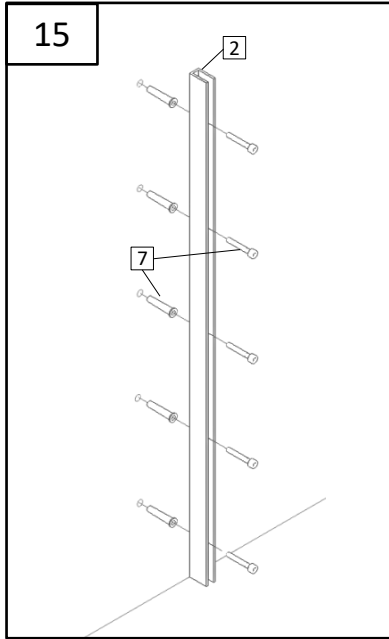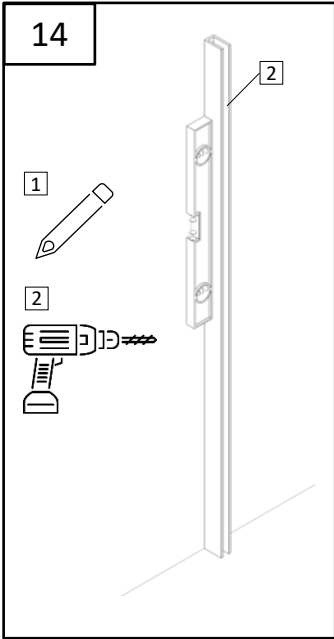

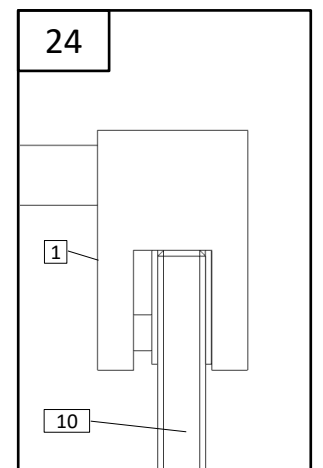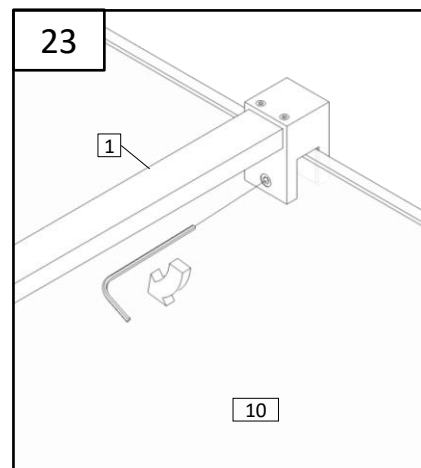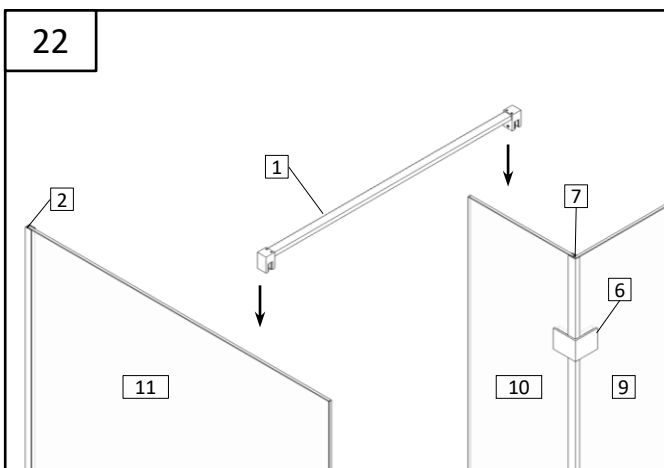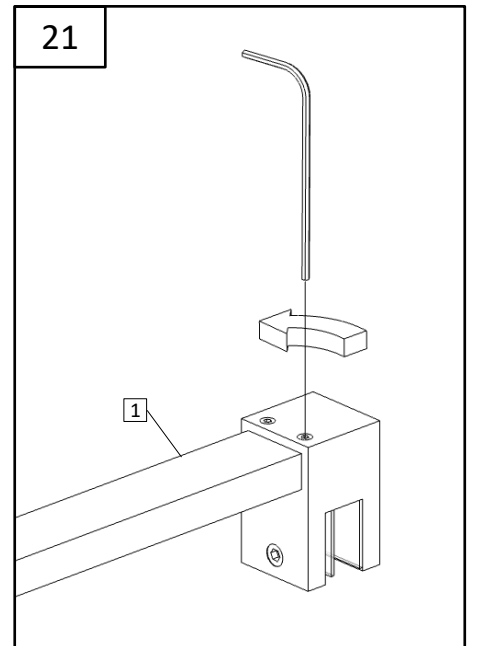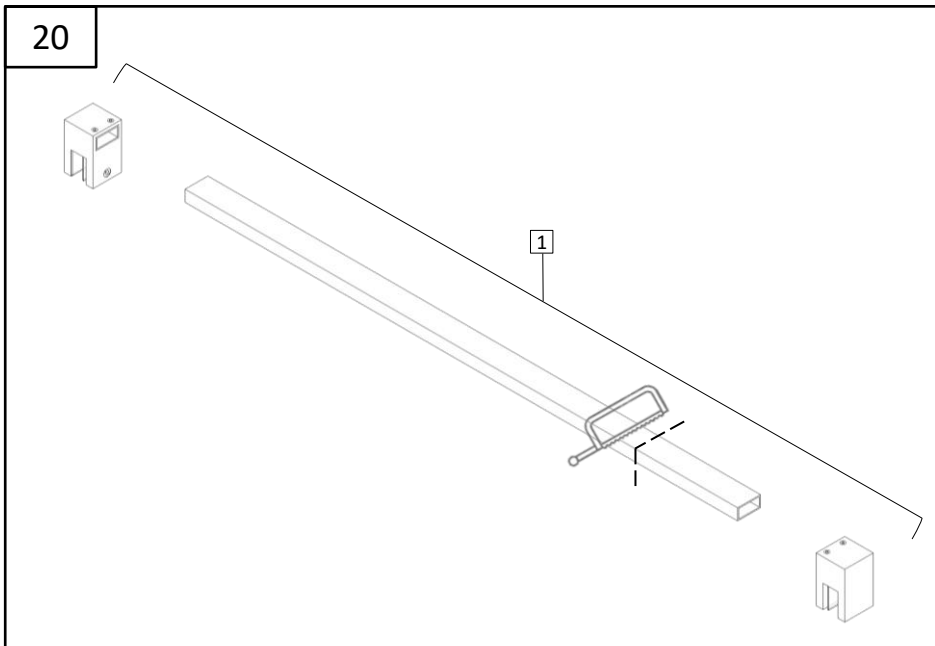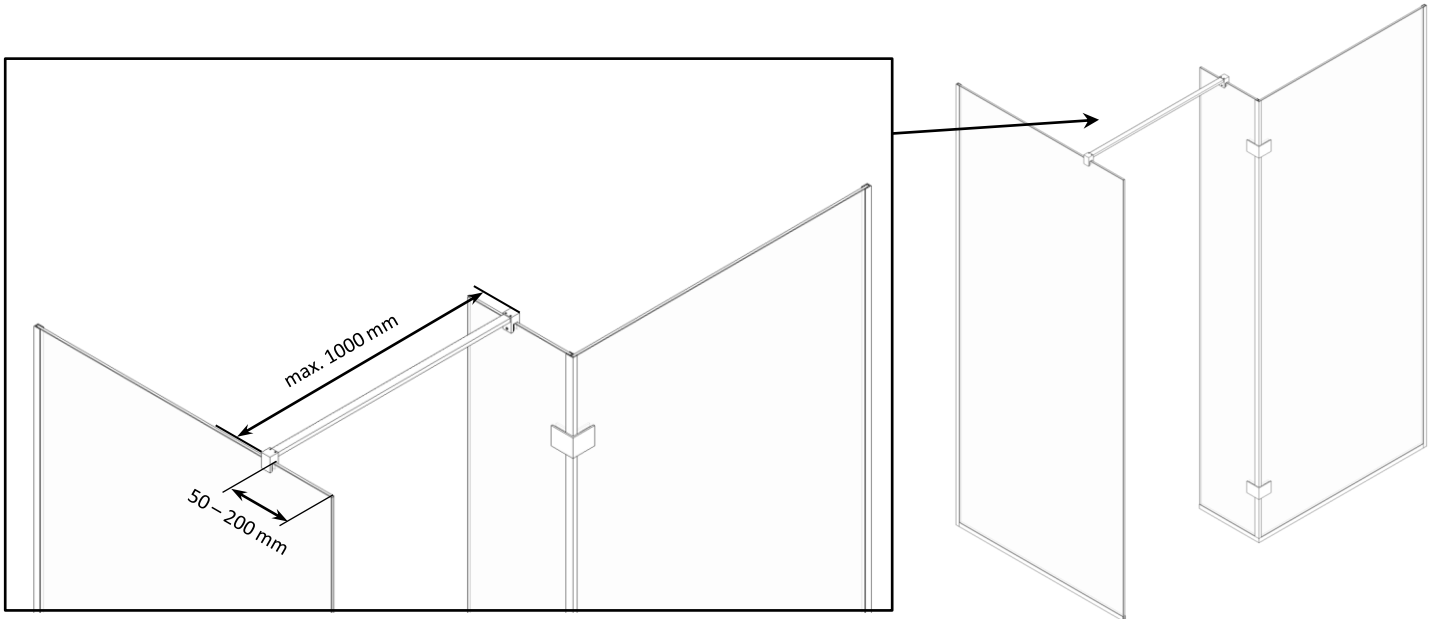

25



24 h

