



REBECCA

Shower door installation instructions

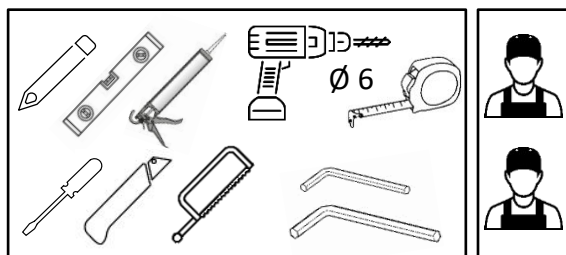

| | | | |
|-----|--|----------------------|---|
| 1. | | MF-42/8-ER | 2 |
| 2. | | 400211PS-013 | 1 |
| 3. | | 40021PS - 009 | 1 |
| 4. | | 3,5x35 SK1SET; Ø 6 | 5 |
| 5. | | PAL-01 | 1 |
| 6. | | PAL-01B | 1 |
| 7. | | SC-ALU8X9NEW | 1 |
| 8.A | | SC-SL-UZL180R | 1 |
| 8.B | | SC-SL-UZL180L | 1 |
| 9. | | SU45CH + SK2SET1 | 1 |
| 10. | | DR-CH32 | 1 |
| 11. | | WGLA6801CP + SK3SET1 | 2 |
| 12. | | 8 mm Safety Glass | 1 |
| 13. | | 8 mm Safety Glass | 1 |

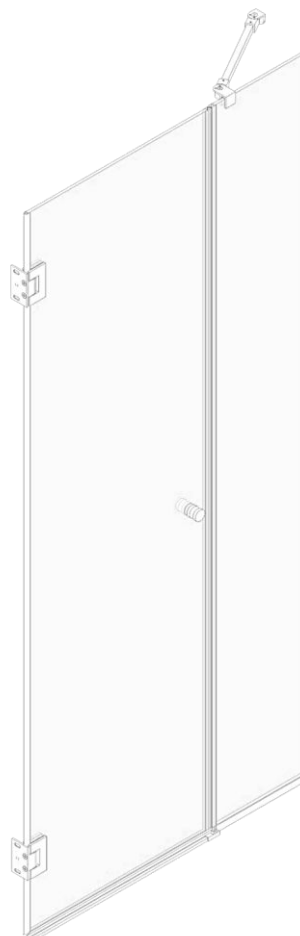

| | A + B | B |
|-------------|-----------|-----|
| 700 x 2000 | 698-703 | 200 |
| 800 x 2000 | 798-803 | 200 |
| 900 x 2000 | 898-903 | 300 |
| 1000 x 2000 | 998-1003 | 300 |
| 1100 x 2000 | 1098-1103 | 400 |
| 1200 x 2000 | 1198-1203 | 500 |

L

R

