



PRELUDE PLUS

Shower door installation instructions

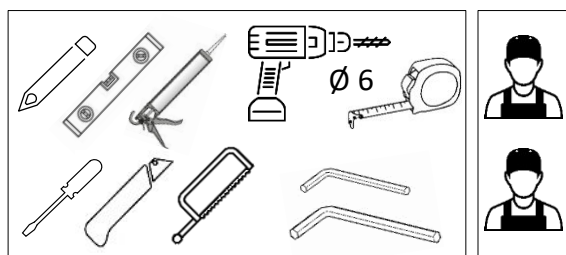

1.		PAL-01	1
2.		PAL-01B	1
3.		SU45CH + SK2SET1	1
4.		GC-2032	1
5.		MF-43MAGN	1
6.		MF-42/8-ER	1
7.		R1653308	1
8.		400211PS-013	1
9.		SC-ALU8X9NEW	1
10.A		SC-SL-UZL180R	1
10.B		SC-SL-UZL180L	1
11.		OSH-OFS2CP	2
12.		DR-CH32	1
13.		3,5x35 SK1SET; Ø 6	5+5
14.		8 mm Safety Glass	1
15.		8 mm Safety Glass	1

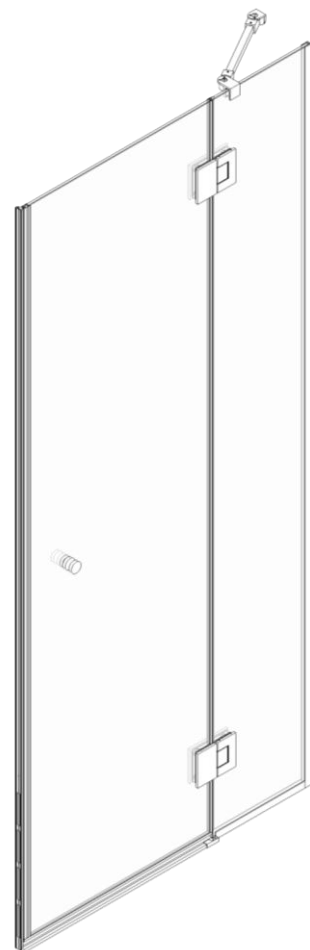

	A + B	B
700 x 2000	698-703	200
800 x 2000	798-803	200
900 x 2000	898-903	300
1000 x 2000	998-1003	300
1100 x 2000	1098-1103	400
1200 x 2000	1198-1203	500

